



IMPORTANT

PhantomFocus eChair™ Set Up Guide

Congratulations on purchasing the ultimate recording engineer's chair. Once you receive the PhantomFocus eChair™ it's important to set it up correctly as there are several options as you can see in the video on the store site: <https://www.phantomfocus.com/category-s/149.htm>. However, I highly recommend that the forward tilt seat position (right rear lever) be locked in with the lumbar height adjusted and its tension either in a fixed position or free moving to follow the occupant movements. If the latter is used you'll need to make certain that you are seated all the way back in the chair as the lumbar will be in the forward position when unoccupied. Either of these two positions render the real magic of the chair making it impossible to slump all day, keeping you in an upright aligned posture.


Happy seating,

Carl Tatz


Phantom Focus eChair™

Chair Assembly Instructions No tools required.


Parts included

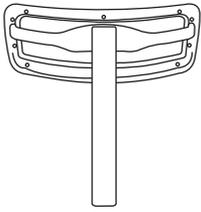

Chair Backrest Assembly

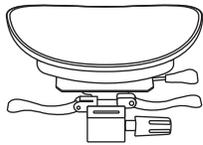


Chair Seat Assembly

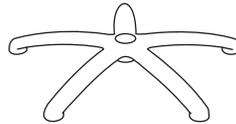

Adjustable Footring Aluminum Base



Cylinder

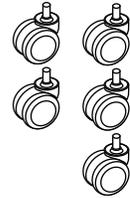

Casters x 5




ASSEMBLY INSTRUCTIONS

1. Insert casters(wheels) into base. Apply a significant amount of pressure to ensure casters are seated properly.
2. Insert height adjustment cylinder into base.
3. Place the chair seat assembly on top of height adjustment cylinder.
4. Insert chair back assembly into chair seat assembly.
REPLACE SMALL BLACK PLUG AFTER INSTALLATION.
5. Sit on chair to permanently lock cylinder into base and seat.

Note: If you ordered the Silver Mesh Porcelain eChair, be sure to install the sheath over the cylinder before attaching the seat.

OPERATOR INSTRUCTIONS

1. Lift up on front, right lever to adjust seat height. (Right side).
2. Lift up on rear, right lever to adjust seat tilt. (Right side).
3. Rotate backrest height adjustment knob counter clockwise to loosen backrest. Once desired height is reached, rotate backrest height adjustment knob clockwise to lock backrest in place. (Right side).
4. Lift up on left lever to adjust backrest tilt. (Left side).
5. Push down on left lever until lever locks into place to actuate the free floating backrest. (Left side).

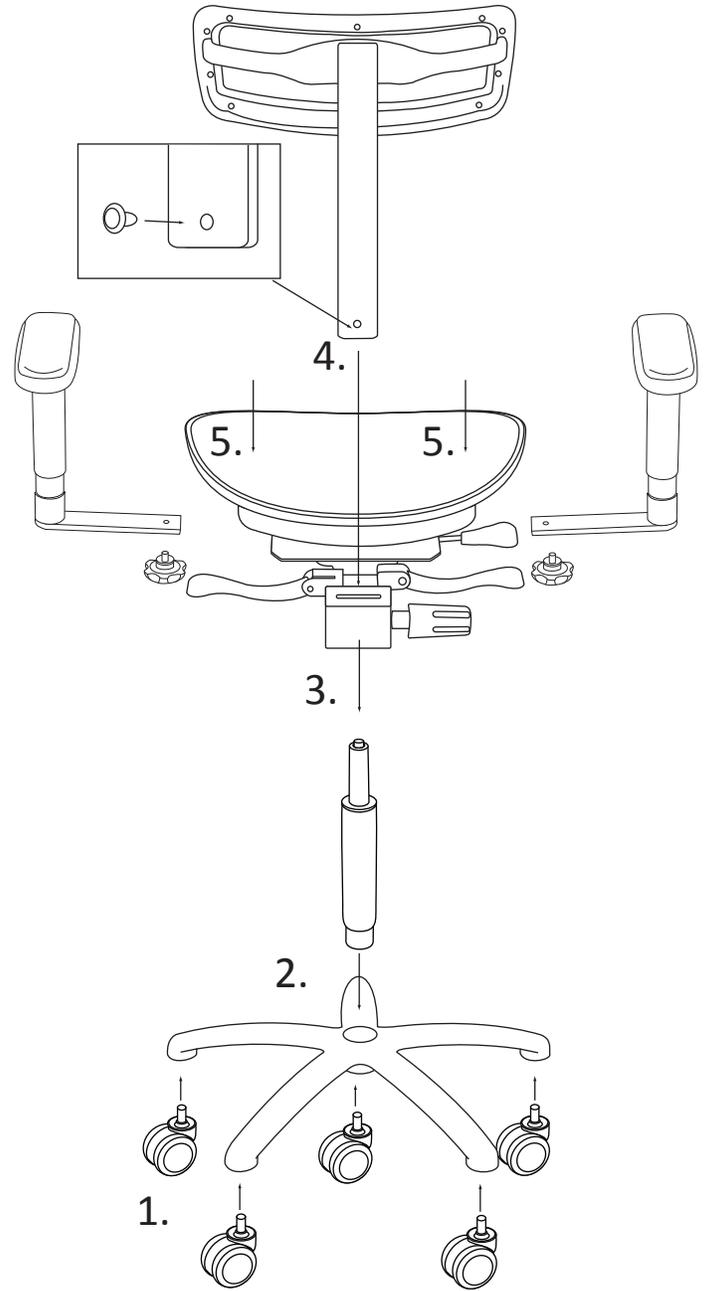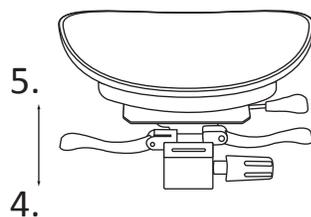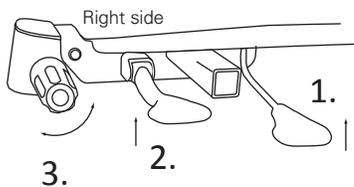

Cleaning Your PhantomFocus eChair™

While staining and soiling exposures are common to upholstery fabrics, most stain and soiling may be removed by using the simple cleaning methods that follow:

For Light soiling:

1. A solution of 10% household liquid dish soap with warm water applied with a soft damp cloth will remove most soiling.
2. If necessary, a solution of liquid cleanser and water applied with a soft bristle brush. Wipe away the residue with a water-dampened cloth.

For Heavier soiling not solved by above method:

1. Dampen a soft white cloth with lighter fluid (naphtha) and rub gently. Rinse with a water-dampened cloth.

NOTE: Use extreme caution with this method. Complete only in a well-ventilated area and away from any open flame.

NOTE: You should try this method on an inconspicuous spot before using it on the original stain/soiling.

For the most difficult stains not removed by the above methods:

1. Dampen a soft white cloth with a solution of household bleach (sodium hypochlorite); 10% bleach, 90% water.
2. Rub gently.
3. Rinse with a water-dampened cloth to remove bleach concentration.
4. If necessary, allow a 1:10 diluted bleach solution to puddle on the affected area or apply with a soaked cloth for approximately 30 minutes. Rinse with a water-dampened cloth to remove any remaining bleach concentration.

NOTE: You should try this method on an inconspicuous spot before using it on the original stain/soiling.

Note

To restore luster, a light coat of spray furniture wax can be used. Apply for 30 seconds and follow with a light buffing using a clean white cloth.

Please Review Carefully

CAUTION: Should you desire to use other cleaning methods, carefully try them in an inconspicuous area to determine potential damage to the material. Never use harsh solvents or cleaners which are intended for industrial applications. To clean stained or soiled areas, a soft white cloth is recommended. Avoid use of paper towels.

CAUTION: Cleaning products may be harmful/irritating to your skin, eyes, etc. Use protective gloves and eye protection. Do not inhale or swallow any cleaning product. Protect surrounding area/clothing from exposure. Use in a well ventilated area. Follow all product manufacturer's warnings. Naugahyde cannot be held responsible for damage or injuries resulting from the use or misuse of cleaning products.

PhantomFocus eChair™

The standard eChair is shipped with cylinder #1. You can request #2 or #3 via email. Number one raises higher than other chairs i.e. the Aeron chair.

Cylinder 1 adjustable height range: 19.5" – 25"

Cylinder 2 adjustable height range: 21" – 31" (Foot ring, Raven Chrome only)

Cylinder 3 adjustable height range: 28" – 38" (Foot ring, Raven - No Chrome only)

Seat dimensions:

W 18.25"

D 17.5"

Overall width with arms attached: 23"

Overall depth: 19"

Base diameter: 24"

Weight with arms: 48 lbs (41 lbs. without arms)

Weight Capacity: 375 lbs.

Shipping weight is 55 lbs

Box size: 23x23x28

Large seat dimensions (Raven Chrome only):

W 20.5", D 18.5".

The user has the option of attaching or not attaching the included adjustable arms.

NOTE: Cylinder 2 can be set very high and if that is the user's intention, we recommend ordering a foot ring for an additional \$50.00. Right now this option is not available on line and the buyer will need to provide his or her CC info with Carl Tatz Design via phone or email.

WARRANTY: Carl Tatz Design LLC warrants the PhantomFocus eChair™ to be free from defects in parts and workmanship under normal use and service for a period of **five (5) years** from the date of shipment. Carl Tatz Design LLC will not be responsible for any product failures due to abuse, misuse, modification, or improper use or for any use that exceeds the published capacity of the product. Products returned in accordance with the Carl Tatz Design LLC return goods policy for inspection and found defective will, at the option of Carl Tatz Design LLC, be repaired or replaced at no charge, but no claim for outside labor or charges will be allowed.

FREIGHT POLICY: All prices are F.O.B. Centennial, Colorado. Title and all risk of loss shall pass to the customer upon delivery of the products ordered to the carrier for shipment.

Carl Tatz Design | www.carltatzdesign.com M: 615.400.5479 | W: 615.354.6242
6666 Brookmont Blvd,
Nashville, TN 37205